







 

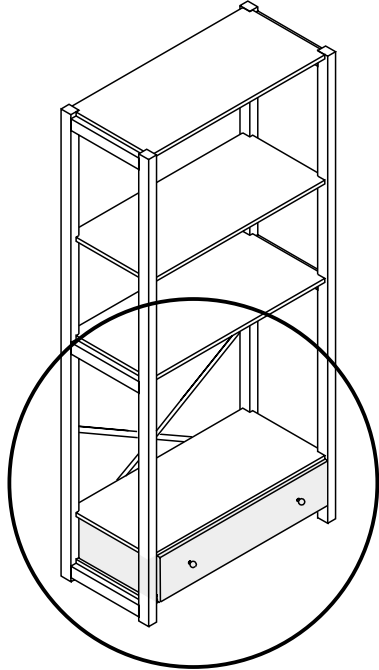
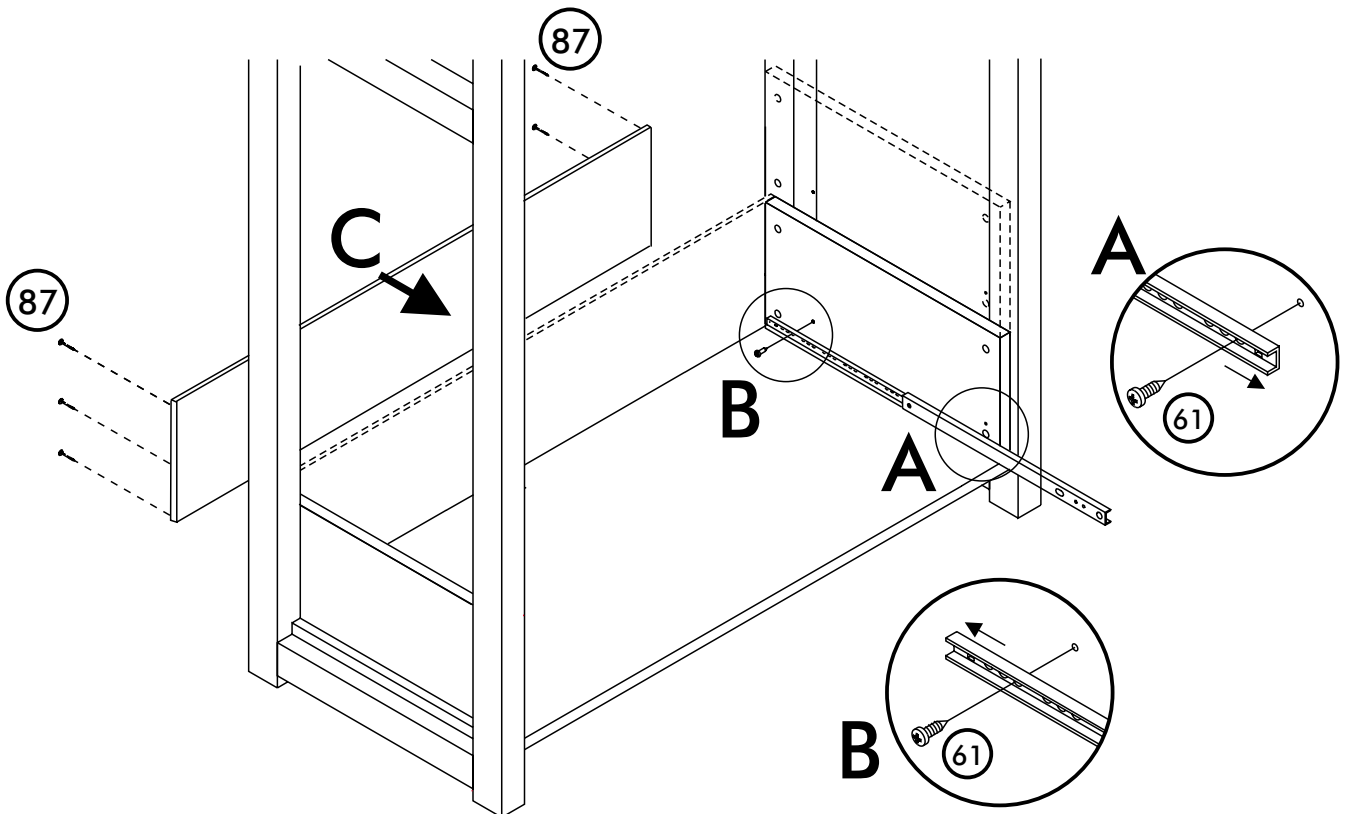
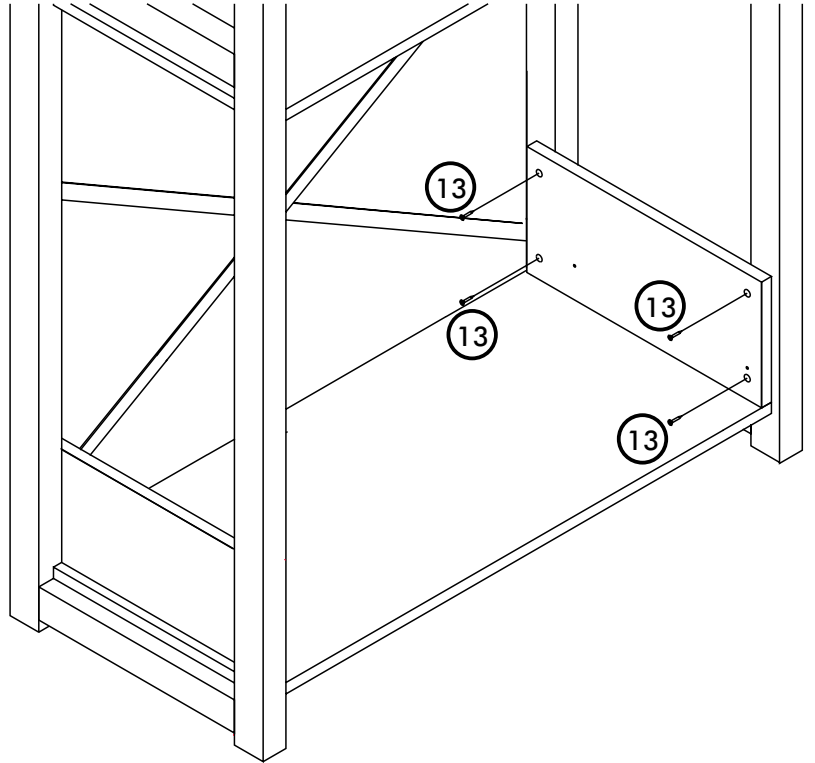










 

(13)	(40)	(43)	(44)	(61)	(62)	(71)	(87)	(89)	(93)
									
x8	x2	x4	x4	x4	x2	x6	x6	x2	x2

Skuffe 3140220 Vejledning nr. 34



**1**



(13)	(40)	(43)	(44)	(61)	(62)	(71)	(87)	(89)	(93)
									
x8	x2	x4	x4	x4	x2	x6	x6	x2	x2

Skuffe 3140220 Vejledning nr. 34

